

# CV7

## ULTRASONIC WIND SENSOR

CV7 is an updated wind sensor based on the CV3F series, already having a world wide distribution. It is light, compact and has a small consumption.

CV7 is designed to fit the specific needs of sailing boats through an easy to use programmable interface.

The sensor can be combined with a P.C., either with normalised NMEA<sup>®</sup> input equipment or with any specialised equipment having common interface.

In PC mode, this bi-directional sensor can be programmed and configured for: angle correction, smoothing time constants, measurements units and interface formats.



- Robust
- No ageing
- Insensible to the gyroscopic effect
- Sensibility stability to light winds
- Minimum of resistance
- Compensation of inclination due to wind

Scale 1/1


## Principle of operation: how the equipment works

The sound, the ultrasonic sound is conveyed by the movement of the fluid in which it crosses. The electroacoustic transducers<sup>1</sup> communicate between themselves two by two by ultrasonic signals<sup>2</sup> to determine, following the orthogonal axes, the wave transit time differences induced by the air flow<sup>3</sup>.

The measurements are combined in an integrated calculator in order to establish the wind module and its direction in relation to a reference axis. The temperature measurements are used for calibration corrections.

CV7 Transducers communicate between themselves delivering four independent measures while head wind measured vectors are preferably used for calculations.

This method gives a sensibility of 0,25 knots, a dynamic of 80 knots and an excellent linearity.

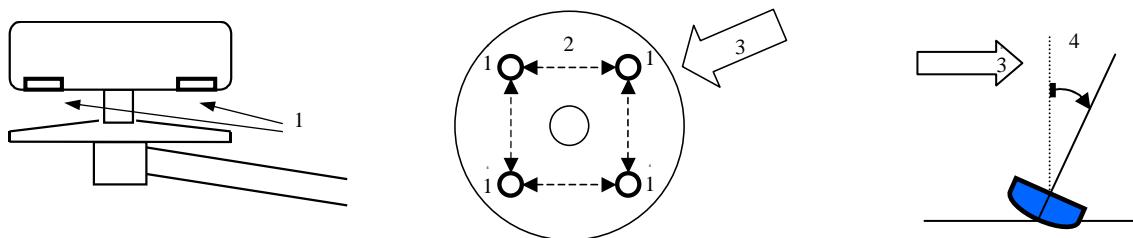

### Characteristics

Numerical output signals : NMEA0183®, MWV, XDR or specialised program.  
Wind sensor sensibility : 0,25 knots  
Resolution : 0,1 knots  
Wind sensor range : 0,25 to 80 knots  
Directional sensibility : +/- 1 degree  
Resolution : 1 degree  
Power supply : 10 to 14 V DC 12 mA  
Temperature range : -10 to 55 °C  
Weather proofing : IP67  
Weight of the head : 150 g (including the support and clamp : 230g)



EN 55022 EN 55024

### Programmable parameters :


Angle correction in degrees  
Smoothing time constant of speed and direction: 1, 2, 4, 8, 16 s  
Speed units in knots, m/sec, km/h  
Temperature units Centigrade or Fahrenheit  
NMEA® interface formats or specialised programs.

### Optional accessories :

ST option : compatible with ST40, ST60  
BG option : compatible with network, Hydra, Hercule  
SIL options: compatible with NEXUS  
BARO option : measurement of the atmospheric pressure  
StatFixBaro : CV7 software program  
Vertical fixation adaptor for CV7  
Numerical transmission speeds 4 800 or 38 400 baud / sec

### Delivery contents :

CV7 sensor  
Support and clamp  
25 m cable, 4 conductors  
User's notice  
CV7 Software configuration

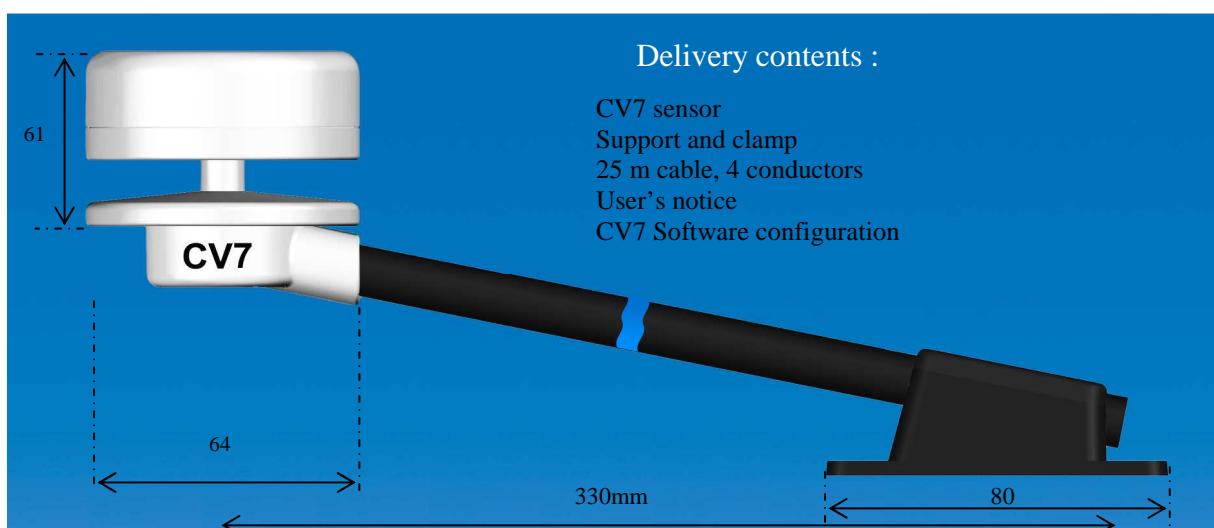

## **Summary**

Installation

NMEA 0183 Interconnexions

NX2 NEXUS or FI30 FURUNO «WIND DATA Instrument»interconnexions

NX2 NEXUS or FI30 FURUNO «SERVER» Interconnexions

FI50 (Fi501) FURUNO Interconnexions

CV7 configuration

Piercing gauge

## Installation

Determine a place free from obstacles to the wind, generally at the top of the mast.  
 Direct the stirrup of fixation so that CV7 is steered forward to the ship.  
 Fix the stirrup following the drillings defined by the joined size.  
 A better precision of the axis can be obtained by using the program of correction of angle.  
 Make the cable walk up to the place reserved for the billposter.  
 Avoid as possible the nearness of cables susceptible to make radio interferences of strong levels.

## NMEA 0183 Interconnexions

Red cable	+ Power source
Blue cable	- Power source
Yellow cable	+ NMEA
Green cable	- NMEA


Link the 12 V power source (10 to 14 VDC). Blue cable - / red cable +  
 Connect the receiving display to the connector NMEA :

- For a RS232 computer COM(1) entry

Link + NMEA to COM1 Rx Terminal 2

Link 0V to 0V the COM1 Terminal 5

If it's necessary, link together the COM1 Terminals 6 and 7.

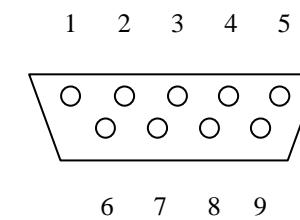


SUBD 9 COM1 points  
 PC plug  
 Soldering joint side

- For a normalised floating RS422 NMEA 183 entry

Make sure that none of the entries of the receiver is not connected with the 0 volts, otherwise to apply the typical connection RS232.

Connect + NMEA with (following the naming) +Ve or In + or A of the indicator NMEA  
 Connect - NMEA with (following the naming) -Ve or In - or B of the indicator NMEA

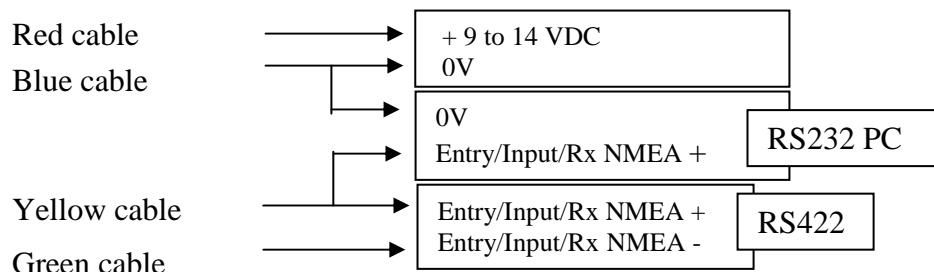


Example of message:

\$IIMWV,226.0,R,000.00,N,A\*0B  
 \$WIXDR,C,036.5,C,,\*52  
 \$PLCJ,75FA,7DEA,03,,,6D7C,837E  
 \$PLCJEAC90,D35D,3F00,2161,FF

### NX2 or FI30 interconnexions «WIND DATA Instrument»

+ Power source 12 VDC (10 to 14VDC)  
with fusible

- Power source 0 V

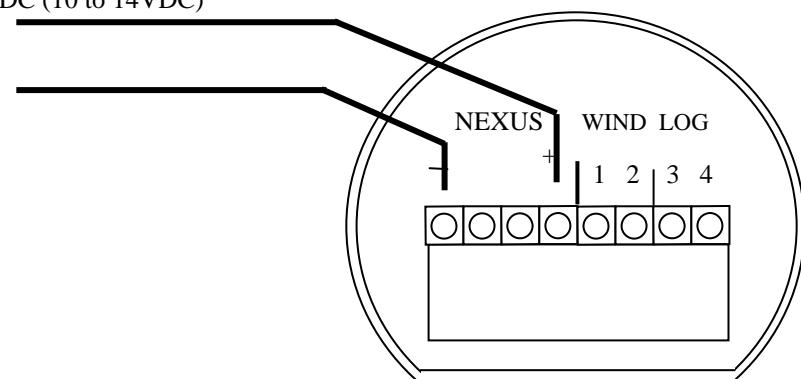


CV7

Red  
Blue  
Green  
Yellow

+12VDC  
0V  
1  
2

### NX2 or FI30 «SERVER» Interconnexions

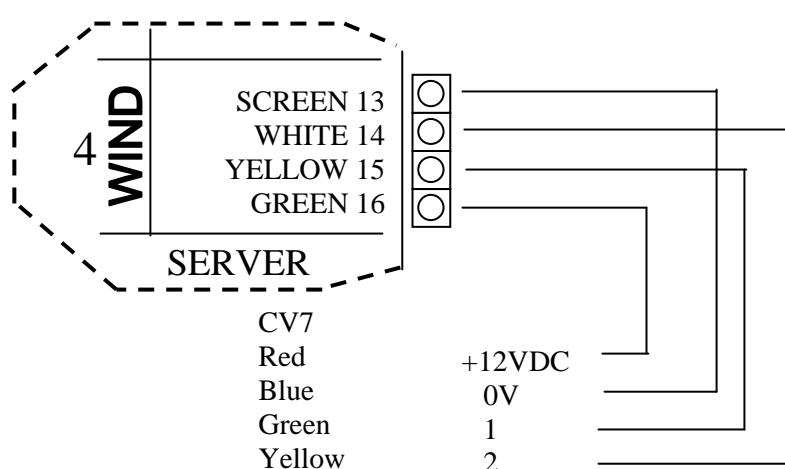



## FI50 (Fi501) FURUNO Interconnexions

+ Power source 12 VDC (10 to 14VDC)

Red

Black

- Power source 0 V

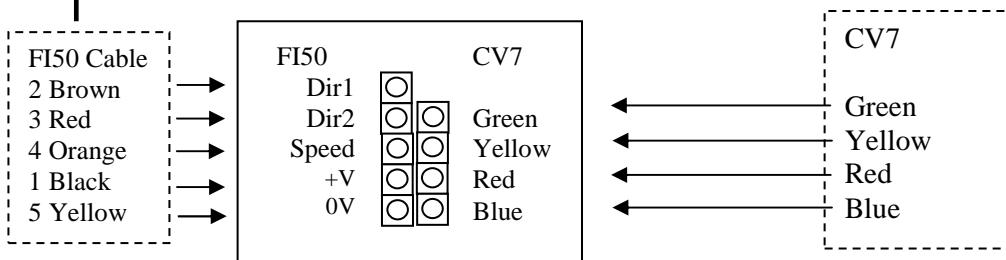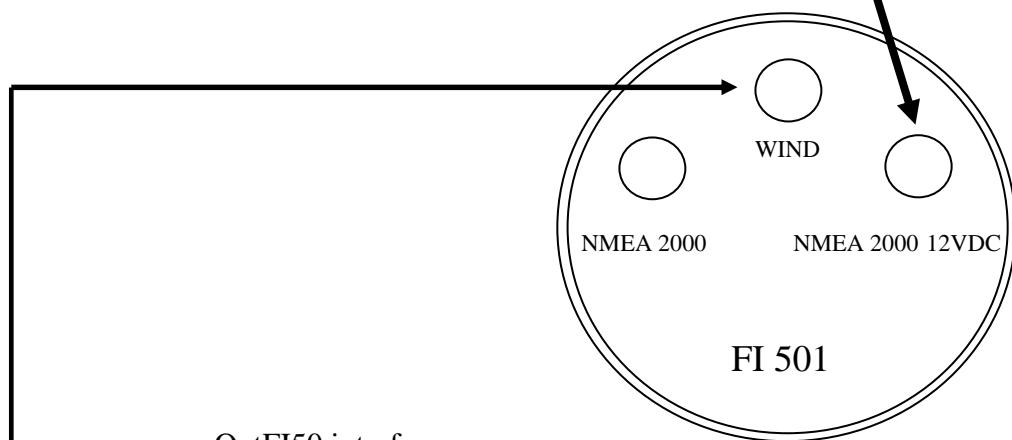

## CV7 configuration

CV7 is delivered with the following configuration :

NMEA0183®

Filtering: 2 s


Forces of wind unity : Nds

Temperature unity: °C

Adjustment of the angle of the wind: 0°

To choose other parameters, use the downloadable software on this website:  
[www.lcjcapteurs.com](http://www.lcjcapteurs.com). « Configuration\_CV7 ».

Realise the following connexions:

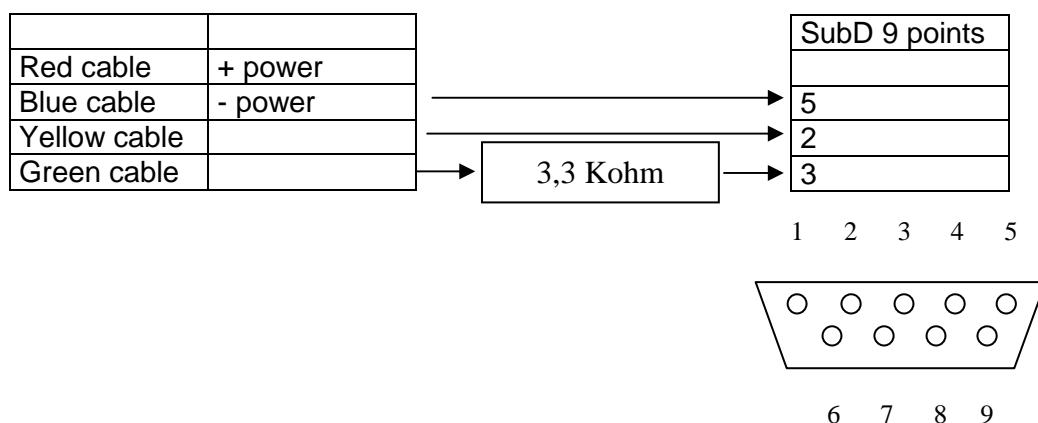

Decompress the file in the directory of your choice, copy the shortcut to the office.


Double click the shortcut, choose the used serial port.

Put under stress CV7

Make the configuration by clicking the corresponding buttons.

Click the button " Programmation CV7 "

Follow the instructions in the screen to put the CV7 out of tension and to restart.

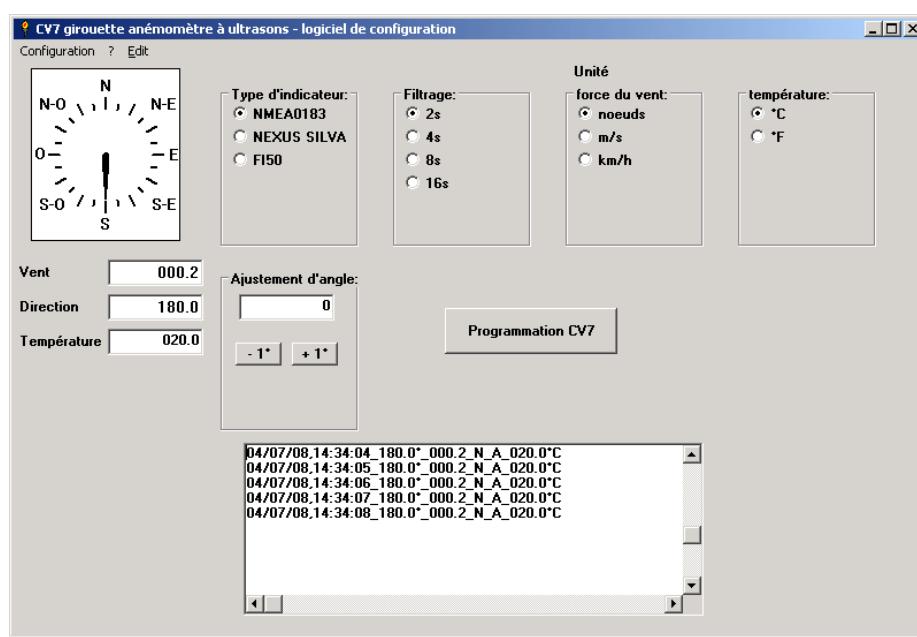

Piercing gauge

